


MANDRELS

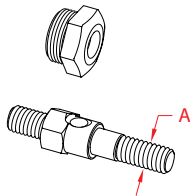

ITEM

A

THREAD

WT

UNC

S0380-U005	3/16" 10-24 RH	Right Hand	(lb) 0.07
S0380-UL07	1/4"-20 LH	Left Hand	0.08
S0380-U007	1/4"-20 RH	Right Hand	0.08
S0380-U008	5/16"-18 RH	Right Hand	0.08
S0380-U010	3/8"-16 RH	Right Hand	0.09

UNF

S0380-F007	1/4"-28 RH	Right Hand	0.08
S0380-FL07	1/4"-28 LH	Left Hand	0.08

METRIC

S0380-M003	M3 x .5	Right Hand	0.07
S0380-M004	M4 x .7	Right Hand	0.07
S0380-M005	M5 x .8	Right Hand	0.07
S0380-M006	M6 x 1.0	Right Hand	0.07
S0380-M008	M8 x 1.25	Right Hand	0.08
S0380-M010	M10 x 1.5	Right Hand	0.10
S0380-M012	M12 x 1.75	Right Hand	0.11

NOTE:

**TO BE USED WITH THE RIVET NUT
INSTALLATION TOOL ABOVE.**

Rivet Nut Inserts, page 92

