
## STANDARD STUD, HAND SWAGE, UNF THREAD, RIGHT HAND 316 STAINLESS STEEL



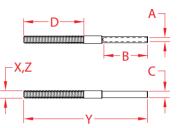



Import Precision Machined

ITEM	A (wire)	в	С	D	<b>X</b> (height)	<b>Y</b> (length)	<b>Z</b> (width)	WT (lb)	PACKAGING TYPE	EACH (qty)	INNER (qty)	CARTON (qty)	UPC
S0731-H0703	1/8"	1.51"	0.21"	2.20"	0.25"	4.32"	0.25"	0.04	POLYBAG	1	50	1,000	791506049241
S0731-H0705	3/16"	2.01"	0.30"	2.19"	0.25"	4.94"	0.25"	0.06	POLYBAG	1	50	500	791506049258

## NOTE:

DESIGNED FOR HAND SWAGE USE ONLY. MAKE INSTALLATION PAINLESS, USING SUNCOR'S HAND SWAGE LINE OF FITTINGS. THREADS ARE "UNF". CRIMP THE HAND SWAGE STUDS ONTO THE WIRE ROPE USING THE HANDSWAGER (PART # E0113-H600). USE HAND SWAGER HOLE #1 ON 1/8" WIRE AND HOLE #2 ON 3/16" WIRE. ALL DIMENSIONS ARE NOMINAL (+/- 3%) AND ARE SUBJECT TO CHANGE WITHOUT NOTICE.